



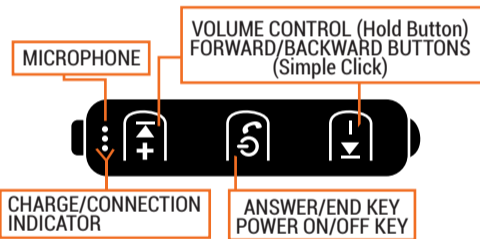

Bluetooth Sports Earphones User Manual IG1902

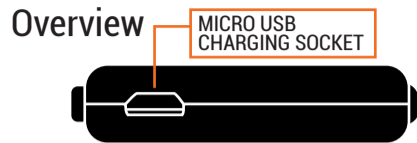

1 Charging the Battery

This device has a built in, rechargeable battery.

Using the supplied Micro USB cable, plug the device into the USB port of a computer or a 240V wall plug.

The red indicator light will illuminate during charging. If the device fails to charge, disconnect the device and try reconnecting again. Charging this device to full capacity can take up to 2 hours.

Once the device is fully charged, the blue light will illuminate.

When the battery power is running low the red light will illuminate and flash with a warning message emitting from the device repeating every five minutes.

2 Switch the Device on/off

To switch on, press and hold the power ON/OFF key for up to 8 seconds, the blue indicator light will illuminate and flash and an audible sound will be heard.

To switch off, press and hold the answer/end key for up to 5 seconds, the red indicator light will illuminate and an audible sound will be heard.

3 Pairing Devices

Prior to pairing your devices, ensure the bluetooth earphones are fully charged.

Activate the bluetooth feature on your smart device.

To commence pairing, with the device OFF, press and hold the answer/end key for at least 6 seconds until both blue & red lights illuminate and an audible sound is heard. When paired, the blue lights will flash.

On your smart device, select BT-IGEAR from the list of found bluetooth devices. There will be a prompt sound from the bluetooth earphones, you are now connected.

4 Troubleshooting

If you cannot connect the headset to your device, try the following;

Ensure the headset is fully charged, switched on & paired with you device.

Ensure the bluetooth is activated on your device.

Check that the bluetooth earphones are within 10m of your device and that there are no obstructions between devices such as walls or other electronic devices.

5 Product Care, Maintenance & Warranty

Your bluetooth sports earphones are an electronic device and should be treated with care.

Care Instructions:

- Keep all devices and accessories out of the reach of small children
- Keep the device dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device gets wet, allow it to dry completely before use.
- To avoid the electronic components being damaged, do not use or store the device in dusty, dirty areas.
- Do not store the device in environments with extreme hot or cold temperatures.
- Do not drop, knock or shake the device. Rough handling can break internal circuit boards and fine mechanics.

Neglecting to follow the above instructions for product care and maintenance will void manufacturer warranty.