
料号: 4.07.03.01.01100

名称: iGear Tag 英文说明书(2年质保)

规格: 80x80mm HD-P16 105g双铜 彩色正反面印刷 风琴折 (802 iGear 客制)

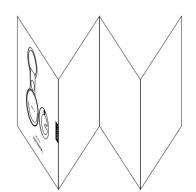

# iGear Tag **USER MANUAL**

Required version iOS 14.5 and iPhone 6s above.





## **Main Functions**

The Apple Find My network provides an easy, secure way to locate compatible personal items on a map using the Find My app on your iPhone, iPad, or Mac. Simply pair your compatible product with the Apple Find My app to view it right alongside your Apple devices. If your item ever goes missing, you can put it in Lost Mode to display a message and contact information to anyone who might find it. The Find My network is encrypted and anonymous, so no one else, not even Apple or the maker of your personal item, can view its location.

### Quick instructions

## 1. Power On / Off

Press the iGear Tag Switch on/off button once to turn it on, the Tag will beep once to indicate that it is powered on. To power off, hold the same button for 3 secs, you will hear short beeps to indicate that your iGear Tag is powered off.

## 2. Check For Updates

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

Start The App, Open the Find My app on your supported iPhone. Turn on Bluetooth and the

## 4. Connect Your iGear Tag

Press the on/off button once to power on your iGear Tag, then select "Add Other Item" Once your iGear Tag is located, tap "connect", Enter a name and choose an emoji for your iGear Tag and tap "Continue". Find My will ask for confirmation for your Apple ID, Tap "Agree" and "Finish", then your iGear Tag will be set up and ready to be used.

### 5. Find iGear Tag When It's Nearby

Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch. Tap your item from the list. Tap "Play Sound" to make your iGear Tag beep. Tap "Stop Sound" to stop the beeps once you find it.

## 6. Find iGear Tag Location

Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch. Tap your iGear Tag from the list. Your iGear Tag location will appear on the Map with a time stamp of when the item was located. To navigate to the iGear Tag's location, tap "Directions" to open Apple Maps.

Enable "Notify When Left Behind".

Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch. Tap on your item from the list. Under "Notifications", enable the "Notify When Left Behind" toggle. You will receive a notification when you leave your iGear Tag behind and it's no longer in

### 8. Enable "Notify When Found"

Under "Notifications", enable the "Notify When Found toggle.

When your iGear Tag is seen by another Find My network device, you will receive a notification of its location. Note: "Notify When Found" can only be activated when your iGear Tag is out of range.

## 9. When Your iGear Tag Is Lost I Enabling "Lost Mode".

Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch. Tap on your term from the list. Under Lost Mode 'tap 'Enable'. A screen detailing Lost Mode will pop up, tap 'Continue'. Enter you phone number or email address and tap 'Next' You may enter a message that will be shared with the person that finds your item.

Tap "Activate" to enable "Lost Mode" Note: When "Lost Mode" is enabled, "Notify When Found" is automatically enabled.

Note: When Lost Mode is enabled, your iGear Tag is locked and cannot be paired to a new device

## 10. Resetting iGear Tag

Remove The iGear Tag from Find My App

Open Find My app and select the "Items" tab. Tap on your item from the list. Please ensure "Lost Mode" is disabled. Scroll to the bottom of the screen and tap "Remove Item". A summary will open, tap "Remove" to confirm.

## 11. Factory Reset Your iGear Tag

After successfully removing the iGear Tag from Find My app. Press the iGear Tag's switch on/off button five times rapidly and hold it on the 5th press until you hear a beep. The iGear Tag is now reset and ready to be paired to a new Apple ID/iOS device.

## 12. Unwanted tracking

If any Find My network accessory separated from its owner, is seen moving with you over time, you'll be notified, Find My will send a notification to your Apple devices. This feature is available on iOS or iPad iOS 14.5 or later. These features were created specifically to discourage people from trying to track you without your knowledge

## **Button & Sound Description**

### 1. Power on

Click the button (long beep)

Hold the button for 3 seconds (2-time beep)

Click the button 5 times holding it on the 5th until there is a long beep (please remove iGear Tag from your "Find My" App before resetting it)

Press "Play Sound" in the Ann (13-time been)

## FAQ:

## 1. How items are located?

When an item is separated from its owner for a period of time, it can be found by other Apple devices in Find My network and the owner can start to get the location of the device.

## 2. How to confirm whether the device is powered on?

After you get the device, press the button in the center of the device, and the device will been.

If there is no response please try to reset the device, if still no response please try to replace the battery or contact our after-sales team for processing.

## 3. How is the device designed to discourage unwanted tracking?

If any Find My network accessory separated from its owner keeps going with you over time, you'll be notified in one of two ways:

- 1. If you have an iPhone, iPad, or iPod touch, Find My will send a notification to your Apple device. This feature is available on iOS or iPad iOS 14.5 or later. 2. If you don't have an iOS device or a smartphone, a Find My network accessory that isn't with
- its owner for a period of time will emit a sound when it's moved, These features were created specifically to discourage people from trying to track you without your knowledge.


## 4. Why I can't find device with Bluetooth connection?

Try to reset the device by clicking the button 5 times holding it on the 5th until there is a beep OR you can try to replace the battery OR you have to disconnect the pairing between this device and other Apple ID first, then retry the connection

iGear Tag contains a button battery. The battery may need to be replaced during the life of the product, Replace only with batteries of the same type (CR2032) and rating, observing correct

## **Battery replacement:**

- 1. Disassemble the product into two parts through the gap between the upper cover and the
- 2. Remove the battery
- 3. Insert the CR2032 battery into the device with the positive (+) side facing up.
- 4. Connect the upper cover and the lower cover, and press tightly.

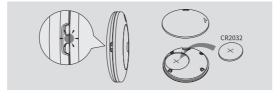

## Safety and handling

Important safety information. Handle your iGear Tag with care, it contains sensitive electronic components, including batteries, that can be damaged, have their functionality impaired, or cause injury if dropped, burned, punctured, crushed, disassembled, or exposed to excessive heat or liquid. Don't use a damaged iGear Tag.

## iGear 1 Year Limited Warranty

iGear's warranty obligations for iGear products are limited to the terms set forth below:

iGear Pty Ltd. ("iGear") warrants iGear products against defects in materials and workmanship for a period of 1 year from the date of original purchase ("Warranty Period"), If a defect arises and a valid claim is received by iGear within the warranty period, iGear will either repair or replace the faulty product. Any items that are required to be returned under warranty must be shipped at the

## Contact us!

If you require further information on any iGear product, please contact us: Website: www.igear.com.au E-mail: sales@igear.com.au

## **Environmentally friendly disposal**

Please dispose of electronic waste thoughtfully, and as per local government





Note: Use of the "Works with Apple" badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc., registered in the U.S. and other countries. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

-07-