




Bluetooth Sports Earphones User Manual

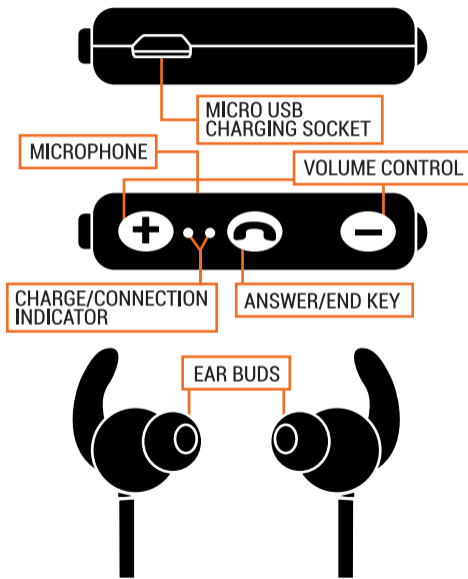

Overview



1 Charging the Battery

This device has a built in, rechargeable battery.

Using the supplied Micro USB cable, plug the device into the USB port of a computer or a 240V wall plug.

The red indicator light will illuminate during charging. If the device fails to charge, disconnect the device and try reconnecting again. Charging this device to full capacity can take up to 2 hours.

Once the device is fully charged, the blue light will illuminate.

When the battery power is running low, the red light will illuminate and flash, with a warning message emitting from the device, repeating every five minutes.

2 Switch the Device on/off

To switch on, press and hold the answer/end key for up to 10 seconds until the blue indicator light illuminates and flashes and there is a prompt sound.

To switch off, press and hold the answer/end key for up to 5 seconds until the red indicator light illuminates and flashes and there is a prompt sound.

3 Pairing Devices

Prior to pairing devices, ensure the bluetooth earphones are fully charged.

Activate the bluetooth feature on your smart device.

To commence pairing, with the device **OFF**, press and hold the answer/end key for at least 10 seconds until both blue and red lights illuminate and there is a prompt sound.

On your smart device, select BT-IGEAR from the list of found bluetooth devices. There will be a prompt sound from the bluetooth earphones. You are now connected.

4 Troubleshooting

If you cannot connect the headset to your phone, try the following;

Ensure the headset is fully charged, switched on & paired with and connected to your smart device.

Ensure the bluetooth is activated on your smart device.

Check that the bluetooth earphones is within 10m of your smart device and that there are no obstructions between devices such as walls or other electronic devices.

5 Product Care, Maintenance & Warranty

Your device is a product of superior design & craftsmanship and should be treated with care. The suggestions below will help you protect your warranty;

- Keep all devices and accessories out of the reach of small children
- Keep the device dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device gets wet, allow it to dry completely before use.
- To avoid the electronic components being damaged, do not use or store the device in dusty, dirty areas.
- Do not store the device in environments with extreme hot or cold temperatures.
- Do not drop, knock or shake the device. Rough handling can break internal circuit boards and fine mechanics.

Neglecting to follow the above instructions for product care and maintenance will void manufacturer warranty.