

展开尺寸 : 420x100mm

折好尺寸 : 100x70mm 折5次

材质 : 105g双铜纸

unfold size: 420\*100mm

folded size: 100\*70mm

105 g double copper paper

iGear Item No.: IG1967



Magsafe Power Bank

USER MANUAL

This product is compatible with wireless devices or non-wireless devices. Please read the user manual prior to use.

### OPERATING INSTRUCTIONS

- 1 Power Switch: This button is used to turn on the power bank and to check the battery status.
- 2 Battery level indicator button is used to check the battery level. All four lights on indicates a full battery.
- 3 Input: Use Type-C cable to charge the power bank.
- 4 Output: This power bank is compatible with all digital devices with 5V/9V/12V input.
- 5 The device supports magnetic wireless charging for iPhone12 series and above. Support Wireless charging mobile phones 15W Max.



The power bank will be turned off after 35 seconds without any operation.

### HOW TO CHARGE THE POWER BANK

- 1 Connect the power bank to a computer, laptop or power adaptor with a Type-C cable.
- 2 The battery level indicator will flash when the power bank is charging.
- 3 When fully charged, the battery level indicator will stop flashing and remain on.



Notice : Short circuit protection can be caused by improper operation, which will then shut down the power bank. To reactivate, recharge and reset the power bank.

### BATTERY INDICATOR

| Battery Indicator | Battery Level |
|-------------------|---------------|
| One Light         | 0%-25%        |
| Two Lights        | 25%-50%       |
| Three Lights      | 50%-75%       |
| Four Lights       | 75%-100%      |

### HOW TO USE THE POWER BANK

- 1 Ensure the output of the digital device you are charging is 5V/9V/12V or wireless charge.
- 2 Use a relevant USB cable to connect the power bank by the USB port to your device.
- 3 Turn on the power bank, your device will commence charging.
- 4 To use wireless charging, place your compatible wireless charging device directly over the magnetic ring.

### NOTES

- 1 Ensure the power bank is fully charged for first use.
- 2 To avoid damage to the power bank, do not use any faulty or damaged cables to charge your device.
- 3 Do not drop, wet, misuse or attempt to disassemble the power bank.
- 4 Do not place this power bank near any heat source.
- 5 Do not put any foreign objects in the input/output port of the power bank. This could lead to short a circuit and damage.
- 6 Ensure the power bank is fully charged at least once every three months.

### FAQ

- 1 Why is my power bank not working? Check the following:
  - Is the USB cable functioning and connected?
  - Is the power bank turned on?
  - Is there enough battery left in the power bank?
  - Is the device compatible to the power bank ( $\leq 12V$ )?
- 2 Why is the power bank charging, stopping, and restarting? Because the charging current may be excessive, and the over current protection function has been activated. To reset the power bank, simply recharge it.
- 3 Why is my power bank not charging my device? This power bank is only compatible with 5V / 9V / 12V input devices, check the input on your device.